

How to Repair Leaking or Dripping Tap ?

How to Repair Leaking or Dripping Tap ?

Bib Tap T

- a) Remove top cap and Open screw by using star screw driver.
- b) Use suitable Plastic spanner to open top assembly.
- c) Check for seal/Oring damage. If any damage noticed, replace the seal/Oring.



How to Repair Leaking or Dripping Tap ?

Bib Tap M

- a) Remove top cap and Open screw by using star screw driver.
- b) Use suitable Plastic spanner to open top assembly.
- c) Check for seal/Oring damage. If any damage noticed, replace the seal/Oring.



How to Repair Leaking or Dripping Tap ?

2 in1 Faucet

- a) Remove front Nozzle.
- b) Check for Washer Damage/ If any Damage Noticed replace Rubber Washer

DO - IT - YOURSELF



How to Repair Leaking or Dripping Tap ?

Shower 5A & 8A

- a) If Leak noticed at A refer b & C
- b) Remove bottom cap and Open screw by using star screw driver.
- c) Check for Oring damage. If any damage noticed, replace Oring.
- d) If Leak noticed at B refer e & f
- e) Remove Shower Back Nut.
- f) Check for Oring damage. If any damage noticed, replace Oring.



How to Repair Leaking or Dripping Tap ?

Hand Shower

- Remove front cap and Open screw by using star screw driver.
- Check for Oring damage. If any damage noticed, replace Oring.
- If any hole block, remove shower face and clean the holes by using sharp edged Tool.

DO - IT - YOURSELF



How to Repair Leaking or Dripping Tap ?

Pillar Tap

- a) Remove top cap and Open screw by using star screw driver.
- b) Use suitable plastic spanner to open top assembly.
- c) Check for seal/Oring damage. If any damage noticed, replace the seal/Oring





How to Repair Leaking or Dripping Tap ?

Aerator Set (Applicable for Pillar tap, Wall Mixer & Sink Tap)

- a) If any Leak noticed at outlet Area, remove aerator set.
- b) Check for Washer damage. If any damage noticed, replace Washer.
- c) If any Water block noticed remove aerator set and clean all inner parts shown in the picture.

DO - IT - YOURSELF

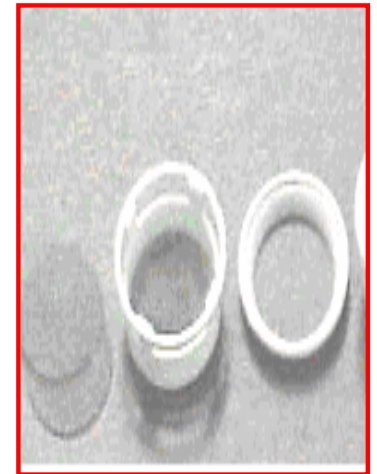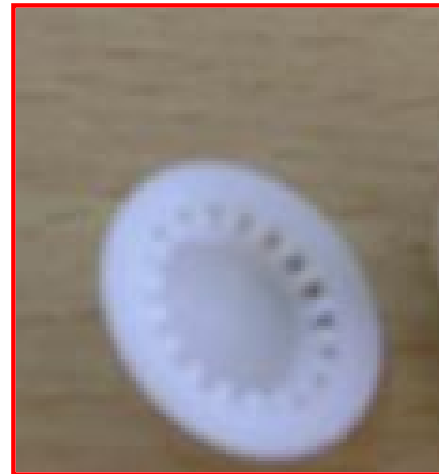

How to Repair Leaking or Dripping Tap ?

Adjustable Shower

- If any flow Restriction noticed, Remove front cap.
- Clean flow path of Washer by using Sharp Tool.
- If leak noticed at marked area, remove shower back nut.
- Check for seal/Oring damage. If any damage noticed, replace the seal/ Oring

DO - IT - YOURSELF



How to Repair Leaking or Dripping Tap ?

Wall Sink Tap

- a) If leak noticed at marked area remove arm by using Watertec Plastic Spanner.
- b) Check for Washer Damage/ If any Damage Noticed replace Rubber Washer.

DO - IT - YOURSELF



How to Repair Leaking or Dripping Tap ?

Wall Sink Tap

- a) If leak noticed at marked area remove arm by using Watertec Plastic Spanner.
- b) Check for Washer Damage/ If any Damage Noticed replace Rubber Washer.

DO - IT - YOURSELF




How to Repair Leaking or Dripping Tap ?

Rain shower Circular & Square

- a) Check for Washer Damage/ If any Damage Noticed replace Rubber Washer.
- b) If any Water block due to dust particles remove washer and clean Wire mesh attached with washer.
- c) If any Hole block due to salt deposition, clean with lemon skin to dissolve deposition.
- d) If any inner block due to salt deposition, remove back side threaded part by using Allen key and clean inner Flow splitting area.

DO - IT - YOURSELF

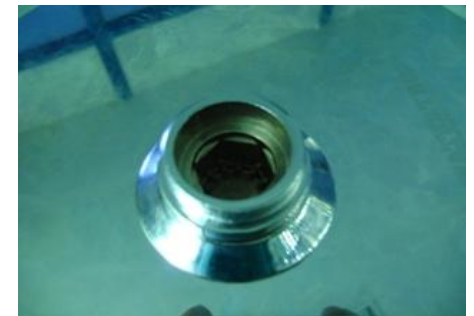

List of Tools Required for Repairing:

- 01.Hammer
- 02.Cutting player
- 03.Adjustment spanner
- 04.Screw driver 2 in 1 (magnet)
- 05.Alan key size 5
- 06.Screw driver long
- 07.Hex Nut Spanner (Wall mixer)
- 08. M6 Spanner(Push Cock)
- 09.Knife